 
 
 



# GiPSi Quick Start



GiPSi + Carrying case  
2 Chargers-Wall/Lighter  
Audio Cable  
USB to mini USB cable  
Ear Bud  
2 Velcro Straps  
1 Double Sided Velcro Strip  
Manual

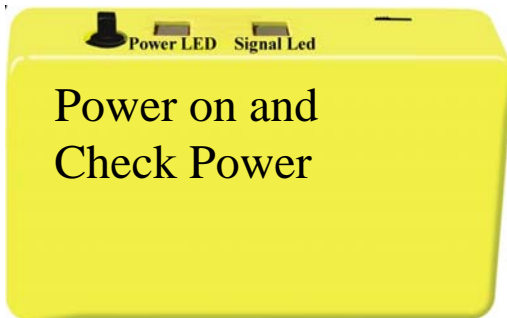

 Slide Switch toward Joy Stick,  
wait 30 seconds  
Power Led Green, GiPSi is  
Ready to USE-Go to Page 2

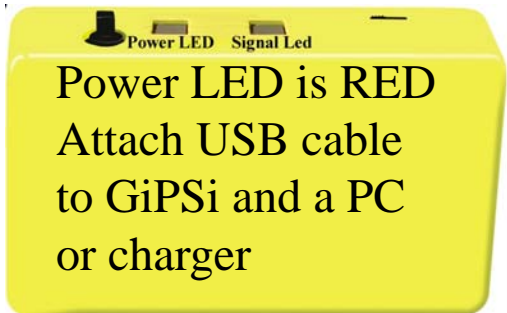

15 minute charge will run for  
one hour. 5 hours for full charge  
Note: Power Led is always  
Green during charging.

Questions

Call 1-800-346-5186

or

Email: [support@gipsinavigation.com](mailto:support@gipsinavigation.com)

For further detail on any command please see Command Schematic and the User Manual